


ASSEMBLY INSTRUCTIONS


PARTS LIST

KEY QTY DESCRIPTION	KEY QTY DESCRIPTION	KEY QTY DESCRIPTION
1 5 Caster	8 1 Seat	14 1 Back Post Bellow
2 1 Base	9 1 Mechanism	15 2 Back Post Bellow Screw
3 1 Seat Post	10 4 Mechanism Screw	16 1 Headrest
4 1 Seat Post Cover (optional)	11 2 Armrest	17 2 Headrest Screw
5 1 Backrest	12 6 Armrest Screw	18 1 M5 Size Allen Wrench
6 1 Backrest Post	13 3 Mechanism Bracket Screw + Washer	
7 1 Backrest Post Screw		


STEP 1.

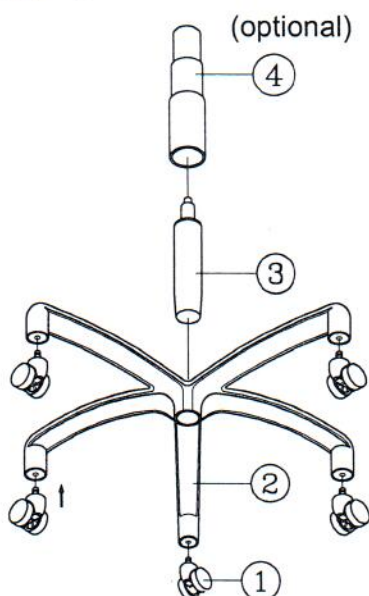


STEP 2.

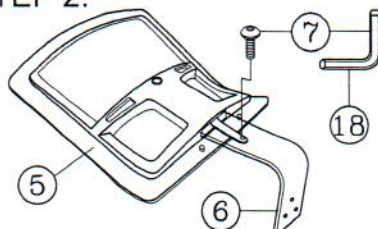

STEP 3.


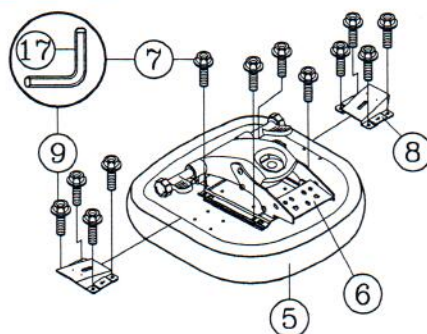


STEP 4.

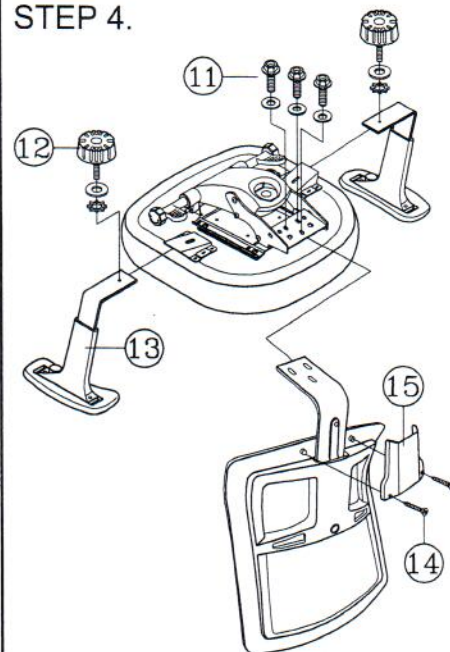

STEP 5. (optional)

Put headrest on top of backrest after assembling chair. It provides more comfort while sitting and it can be anytime.

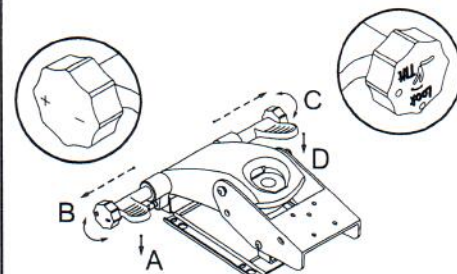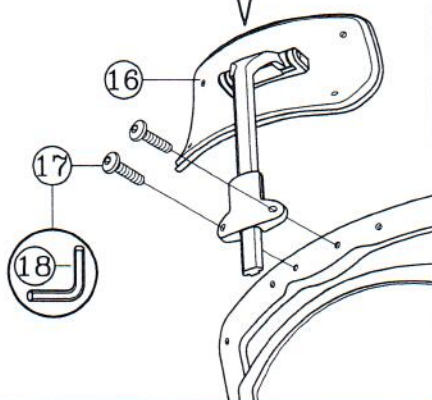

MECHANISM INSTRUCTIONS :

- (A) : Pneumatic seat height adjustment : Lift to adjust seat height.
- (B) : Tilt tension micro adjustment knob : Slightly turn clockwise to increase tilt tension and counter - clockwise to decrease.
(Pull knob (B) out for easy operation)
- (C) : Backrest locking control knob: Turn clockwise to lock backrest in position and counter - clockwise to unlock.
(Pull knob (C) out for easy operation)
- (D) : Seat slide control lever : Lift lever up to slide and release once desirable position is reached.

ATTENTION

1. THIS ASSEMBLY INSTRUCTION IS ONLY FOR ASSEMBLING THE CHAIR. THE CHAIR DRAWING MAY BE DIFFERENT FROM CHAIR APPEARANCE.
2. SOME SCREWS MAY PREASSEMBLED , ASSEMBLERS CAN IGNORE THE STEP.
3. REMOVE ALL ITEMS FROM THE CARTON. VERIFY ALL PIECES BEFORE ASSEMBLY.

PREVENTIVE MAINTENANCE AND WARNING!

- IF ANY PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS.
- DISPOSE OF PACKAGING PROPERLY.
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.
- EVERY SIX MONTHS, PLEASE MAKE SURE ALL BOLTS, SCREWS AND KNOBS ARE FULLY TIGHTENED TO ENSURE STABILITY.

GRANADA